

MONORAIL COMMUTER LOADOUT CAR INSTRUCTIONS








This kit would benfit from painting of the MDF parts before assembly. Just remember to carefully lightly scrap or sand the paint off the tabs to ensure the kits goes together smoothly





We use a non-fogging superglue designed for gluing clear parts to afix our acrylic pieces. The brand we use is Loctite Glass. It is worth hunting around in your local hardware store for a similar glue!

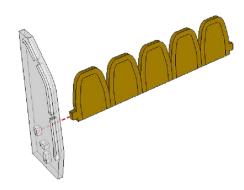

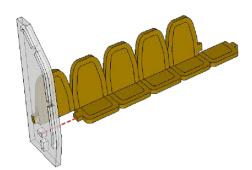

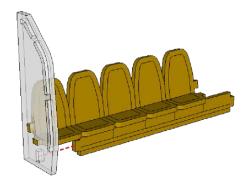

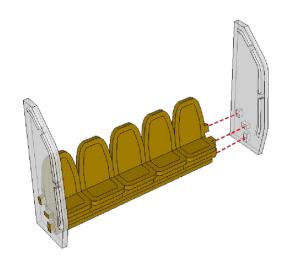

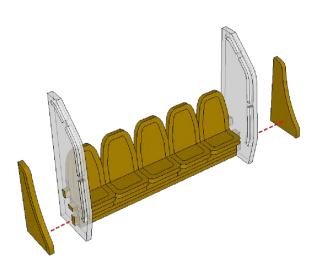



MONORAIL COMMUTER LOADOUT CAR INSTRUCTIONS



